
Chassis Quick Reference

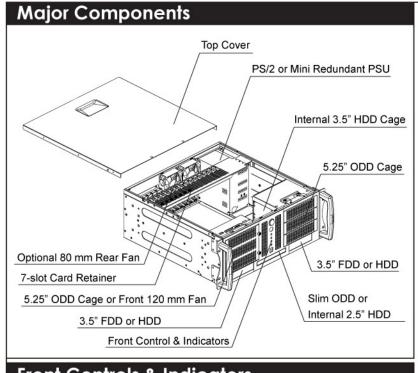


Front Controls & Indicators


- A: Power On/Off Switch
- D: HDD LED E: LAN1 LED

F: LAN2 LED

G: USB Ports








Front 120 mm & Rear 80 mm Fan Assembly

Rear 80 mm Fan

- 1. Align 80 mm fan to rear window
- 2. Tighten 8 screws to fix one fan & finger guard

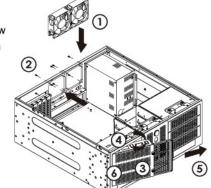


Front 120 mm Fan & Filter

- 3. Loose 2 thumb screws
- 4. Open the fan bracket
- 5. Pull out the filter for maintenance
- 6. Pull out the fan bracket & loose 4 screws to remove 120 mm fan

Pedestal Foot-stand Assembly

- 1. Loose 6 screws on each handle rack ear for removal
- 2. Align the foot stands on chassis & tighten with screws

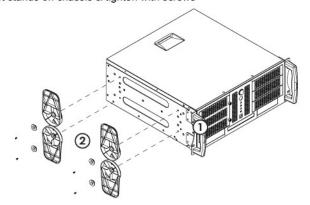

Internal 3.5" HDD & 80x25 mm Fan Assembly


1. Loose 2 screws & pull out the cage

Installing HDDs

2. Tighten 4 screws to fix one 3.5" HDD on cage


Installing 80x25 mm Fan & HDDs

- 3. Tighten 4 screws to fix 80x25 mm fan & finger guard
- 4. Tighten 4 screws to fix one 3.5" HDD on cage

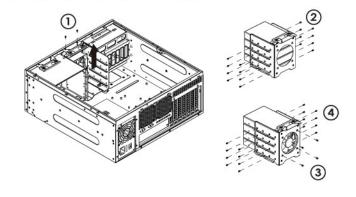


5.25" Drive Cage Assembly

- 1. Loose 2 screws on top of cage
- 2. Loose 2 screws on side of chassis
- 3. Move the cage backward & pull it out

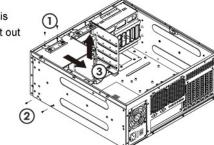


Install Slim ODD

- 1. Loose 2 screws & remove the slim ODD blank cover
- 2. Tighten 2 screws to fix the slim ODD bracket
- 3. Insert the slim ODD
- 4. Tighten 1 screw to fix slim ODD

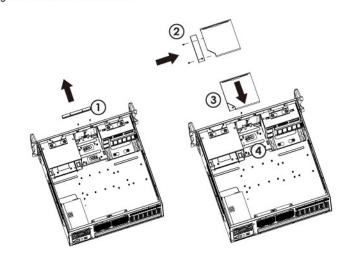


Install Internal 2.5" SAS / SATA-II HDD


- 1. Insert 2.5" HDD into slim ODD cage
- 2. Tighten 4 screws to fix 2.5" HDD

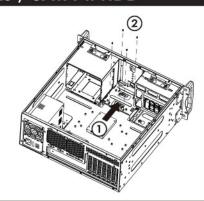

Front Door Assembly

- 1. Loose 12 handle rack ear screws to remove handles & fix it on door
- 2. Tighten 8 original handle screws to fix door on chassis

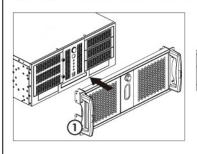

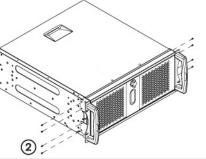

74H123423-001

2009.07